

DS-520AN Setup Guide

English



Thank you very much for purchasing the Wireless USB Device Server "DS-520AN". This Setup Guide provides information on how to configure and use DS-520AN in your network environment.

- (De) Die deutsche Version des Setup-Guides kann von unserer Internetseite heruntergeladen werden. (siehe **Schritt 2** auf der Rückseite)
- (Fr) La version française du guide d'installation peut être téléchargée à partir de notre page d'accueil (voir **l'étape 2** à l'arrière).
- (It) È possibile scaricare la versione italiana della guida alla configurazione dalla nostra homepage (vedi **il Punto 2** sul retro).
- (Es) La versión en español de esta guía de configuración puede descargarse desde nuestra página web (vea el **Paso 2** en el reverso).
- (Pt) A versão em português do manual de instalação pode ser baixada de nossa homepage (veja **passo 2** no verso).


Package Contents

Please confirm the following items are bundled with DS-520AN:


- DS-520AN
- AC Adaptor
- Setup Guide (this document)
- Warranty Booklet
- GPL Note

Parts and Functions


FRONT

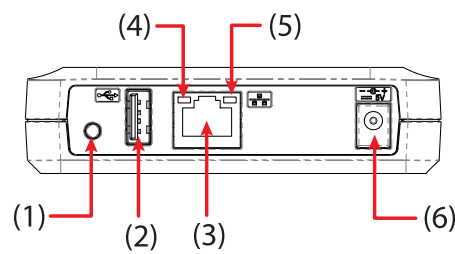

TOP

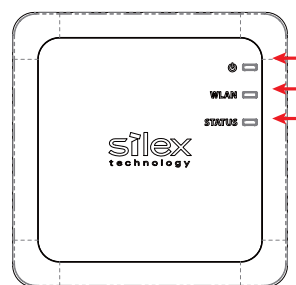

BOTTOM

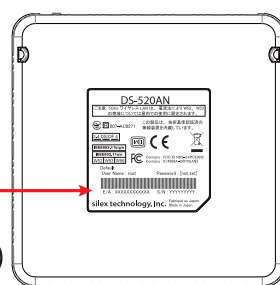

- (1) Push Switch
- (2) USB Port
- (3) Network Port
- (4) Status LED (Green/Orange)
- (5) Link LED (Green)
- (6) Power Connector
- (7) POWER LED (Green/Red)
- (8) WLAN LED (Green/Red)
- (9) STATUS LED (Green/Red)
- (10) Ethernet Address
- (11) Serial Number

Before You Begin


About configuration methods

The following 3 configuration methods are supported. This Setup Guide explains how to configure DS-520AN using a network cable. For other configuration methods, please refer to the online manual.

Configuration using a network cable (Recommended)

By connecting DS-520AN to your existing network using a network cable, you can configure the network settings from your computer. For this method, a network cable is required.

Sample connection

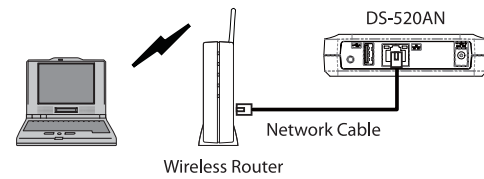

Configuration using the WPS feature of your wireless router

If your wireless router supports WPS (Wi-Fi Protected Setup), the network configuration can be done automatically by pressing the wireless connection button on your wireless router and the push switch on DS-520AN. For this configuration method, a wireless router supporting WPS is required.

Configuration using a USB flash drive

By saving the configuration information to a USB flash drive and connecting it to DS-520AN, you can configure the network settings. To save the configuration information to the USB flash drive, please use the configuration utility of DS-520AN. For this configuration method, a USB flash drive is required.

Check Your Wireless Settings

To use DS-520AN in your wireless network, DS-520AN must have the same settings as your wireless router (Access Point). Please check the wireless settings of your router and write them down in the table below:

*The information below is specific to your network and cannot be provided by Silex's technical support. For how to confirm each setting, please refer to the operating manual that came with your router or contact the manufacturer.

			Configuration Memo	
Encryption Mode (Network Authentication)	SSID	The SSID is an ID that distinguishes a wireless LAN network from others. For wireless devices to communicate with each other on a wireless network, they must share the same SSID. (The SSID is also referred to as "ESSID".) Please note that some wireless routers have several SSIDs. If there are different SSIDs for a game and computer, use the one for the computer.	SSID	_____
	No Encryption	Uses no encryption for wireless communication. (In this case, you do not have to check any of your settings beforehand.)	Network Authentication	WEP / WPA / WPA2 (Open / Shared)
	WEP	If WEP encryption is used, wireless communication will be encrypted using the settings for "WEP Key 1-4" and "Key Index". Set the same "WEP Key Size(64bit/128bit)", "WEP Key" and "Key Index" as your wireless router.	WEP Key or Pre-Shared Key	_____
WPA / WPA2	Uses PSK for network authentication. The encryption key will be generated by communicating with the wireless router using a Pre-Shared key. WEP key setting is not used for this mode. Set the same "Pre-Shared key" and "Encryption Mode"(TKIP/AES) as your wireless router. The Pre-Shared key is also referred to as "Network Key" or "Password".	WEP key Size and Key Index or Encryption Mode	_____	



Step 1. Power On

Connect DS-520AN to your network using a network cable.

If DS-520 has been used somewhere on your network and you want to use it for other network, reset it to factory defaults first.

- 1** Connect DS-520AN to your wireless router using a network cable (1).
- 2** Connect the AC adaptor to DS-520AN (2) and the AC plug to the power outlet (3).
- 3** Confirm that the POWER LED turns Green.

* Be sure to use the AC adaptor that came with DS-520AN.

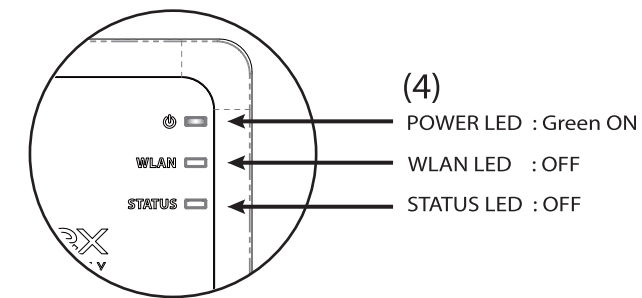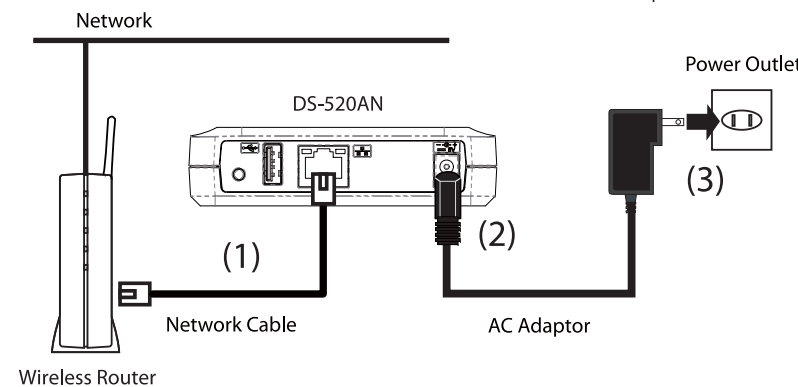


When the POWER LED is OFF
The AC adaptor is not plugged in properly. Start from **2** again.

When the WLAN LED blinks
The network cable is not plugged in properly. Start from **1** again.
If the network cable is plugged in properly, DS-520AN may contain incorrect network settings. In such a case, reset DS-520AN to factory defaults and start from **1** again.
For details on how to reset DS-520AN to factory defaults, refer to **Factory Default Configuration**.

Factory Default Configuration

- 1** Remove the AC plug from the power outlet (1).
- 2** Push and hold the push switch while inserting the AC plug back into the power outlet (2). Continue holding.
- 3** When the STATUS LED turns Red (3), the factory default configuration is about to begin. Release the push switch then. When the STATUS LED turns off, the factory default configuration is completed.

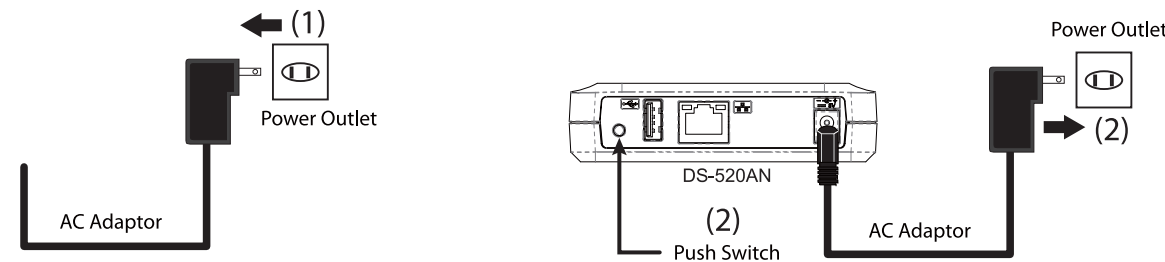

Step 2. Configuration

2-1. Downloading the Necessary Items

1 Access the URL below to download the utilities and user manuals.

URL: <https://www.silextechnology.com/>

2 Go to the **Support** page and select the product model.

Product Model DS-520AN

3 Download the utilities and documents below to your computer.

Utility	Device Server Setup
	SX Virtual Link
User's Manual	DS-520AN User's Manual
	Device Server Configuration guide
	SX Virtual Link Installation guide

There are Windows version and Macintosh version for the utility. Please download correct one for your environment.

2-2. Configuration

* Please temporarily disable the firewall function of the computer during the configuration. Some of the methods to disable the firewall are provided in the FAQ on our homepage.
- Commercial security software's firewall function

* For wireless settings to configure, see the settings you checked at **Before You Begin** on the back.

1 Extract the Device Server Setup file that you have downloaded at **2-1. Downloading the Necessary Items**.

2 Configure the DS-520AN using **Device Server Setup** utility according to instructions on **Device Server Configuration** guide (PDF file).

3 Unplug the AC plug of DS-520AN from the outlet to restart DS-520AN. If you want to use DS-520AN wirelessly, unplug the network cable, too. Connect DS-520AC to the USB device that you want to use over network and plug the AC plug of DS-520AN back into the outlet.

* The setting will take effect after DS-520AN is restarted by unplugging/plugging the AC plug.

Step 3. Using the USB Devices over Network

The SX Virtual Link is the software program to make a communication between your computer and the USB devices connected to the device server. To use the USB devices over the network, you have to connect to or disconnect from it using the SX Virtual Link.

3-1. Installing the SX Virtual Link

If the SX Virtual Link is not installed to your computer, install it by following the instructions in this section.

1 Extract the SX Virtual Link file that you have downloaded at **2-1. Downloading the Necessary Items**.

2 See the downloaded PDF manual (SX Virtual Link Installation) to install the SX Virtual Link.

* The SX Virtual Link installer will restart your computer after it is installed. Make sure that you finished all software programs on your computer before starting the installation.

3-2. Basic Use of the SX Virtual Link

Starting the SX Virtual Link

Windows

Click the application icon (📌) in the task tray or click **Start - (All) Programs - SX Virtual Link - SX Virtual Link**.

Connecting the USB devices

* When using the USB device for the first time, you may need to install the device driver for that USB device.

To install the driver, refer to the operating manual that came with the USB device, or follow the instructions on the screen displayed after clicking the **Connect** button in the SX Virtual Link.


1 Select a USB device and click the **Connect** button (🔗). The USB device can be connected when the status icon [🟢] is displayed.

* The USB device can also be connected by selecting and double-clicking it on the SX Virtual Link.


* If a device server is not displayed on a list, please click the **Refresh** button (🔄).

* Do not unplug the USB cable or network cable, or click the **Disconnect** button (🔌) on the SX Virtual Link while the USB device is in use.

Windows

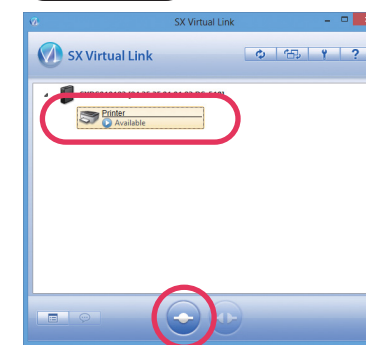

Macintosh

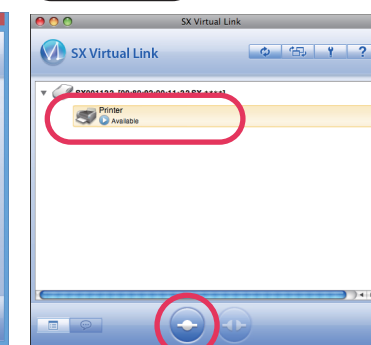

2 The Plug and Play function automatically creates an appropriate environment to use the selected device.

The USB device will be ready to use once the status icon has changed to [🟢]. See the operating manual that came with your USB device for how to use it.

* Only one device can be connected at a time. When the USB device is in use by another computer, the status icon [🟡] is displayed, which means that the USB device is not available now.

Disconnecting the USB devices


When you have finished using the USB device, disconnect the device by selecting it and clicking the **Disconnect** button (🔌).

* The USB device can also be disconnected by selecting and double-clicking it on the SX Virtual Link.

Windows




Macintosh

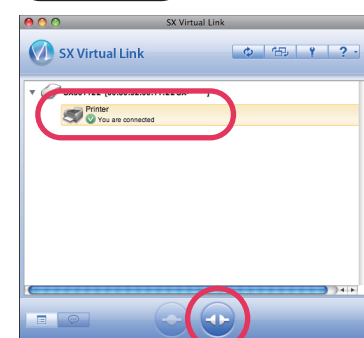

Accessing Online Help

Click the Help button (🔍) and select **Help** from the displayed menu to access the SX Virtual Link's Online Help.

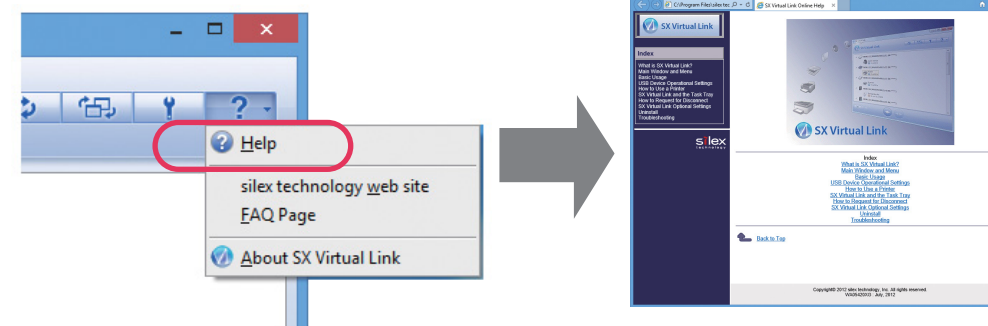

Customer Support

USA : silex technology america, Inc.
E-mail : support@silexamerica.com
URL : <https://www.silextechnology.com/>
Phone : +1-657-218-5199

Europe : silex technology europe GmbH
E-mail : support@silexeurope.com
URL : <https://www.silextechnology.com/>
Phone : +49 (0)2154-88967-0